



33 EAST 17TH STREET, NEW YORK, NY 10003
TEL: 646-230-1900 FAX: 212-228-9898

WO#: 306185

OPERATOR: cd'e

DATE: 07.24.13

ROUND: 7

CMYK

Pantone Cool Gray 8 C

GOE 9-1-5 C built as
3C 58M 100Y OK

7424 C built as
4 C 81M 16Y OK



SONIC FOOT TRANSFORMATION

User Guide

Adjustable Timer & Speeds

Battery Life Indicator

USB pLink® Charger

Become a **Clarisonic Preferred Customer**

Details on back

clarisonic





bound edge

bound edge

IMPORTANT SAFEGUARDS

When using electrical products, especially when children are present, basic safety precautions should always be followed, including but not limited to the following:

READ ALL INSTRUCTIONS BEFORE USE

DANGER – To reduce the risk of electrocution:

1. **Do not** place or store the charger or plug where it can fall or be pulled into a tub or sink.
2. **Do not** place the pLink charger in or drop the charger or plug into water or other liquid. Charger unit is not for immersion or for use in the shower.
3. **Do not** reach for a pLink charger or plug that has fallen into water. Unplug immediately.

WARNING – To reduce the risk of burns, electrocution, fire, or injury to persons:

1. Close supervision is necessary when this product is used by, on, or near children or physically challenged persons.
2. Use this product only for its intended use as described in this manual.
Do not use attachments not recommended by the manufacturer.

bottom page (when book flips open)

top page (when book flips open)

3. Keep the cord away from heated surfaces.
4. Never use while sleeping or drowsy.
5. Do not use the charger outdoors.
6. For best performance, please use the Power Adapter supplied with the unit.

Never operate the Clarisonic Pedi handle if it is damaged. Do not operate the charger if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water. Call Clarisonic at 888-525-2747.

SAVE THESE INSTRUCTIONS

The handle, charger and power adapter have no serviceable parts.

The supply cord cannot be replaced. If the cord is damaged, the charger must be unplugged and replaced. Call Clarisonic at 888-525-2747.

FCC Statement: This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to Part 15 and Part 18 of the FCC Rules. For further details, please see our website.

bound edge

bound edge

IMPORTANT CAUTIONS AND WARNINGS

If you are under a doctor's care for any skin condition or if you think you may have an adverse condition that could be affected by use of this product, please consult your physician before using the Pedi System.

Do not operate Clarisonic facial brush heads on the Pedi device.

The Pedi System is to be used only on the feet and should not be used on the face or other areas of the body.

Do not use the Pedi device for any application other than its intended use on the feet.

This product uses magnets.

We recommend that you **do not** share the Wet/Dry Buffing Brush or Smoothing Disc.

We recommend that you use the Pedi device in a foot care regimen with formulations which have been specifically developed for use with the Pedi System. **Do not** use the Pedi device with jagged particles such as shells.

Sunburn Alert: The Pedi-Buff and Pedi-Boost contain an alpha hydroxy acid (AHA) that may increase your skin's sensitivity to the sun and particularly the possibility of sunburn. Use a sunscreen, wear protective clothing, and limit sun exposure while using this product and for a week afterwards.

bottom page (when book flips open)

top page (when book flips open)

CLARISONIC® PEDI

Designed to smooth and soften dull, rough feet at home or between professional pedicures, the Sonic Pedi System combines expertly engineered tools with sonically designed formulations to counteract the factors that cause dry, rough patches. Feet – especially heels and toes – become soft, supple and sandal-ready. The Pedi handle is waterproof for use in the shower or bathtub. Refer to Important Safeguards regarding the charger.

READ ALL INSTRUCTIONS BEFORE USE

TO USE

Prior to the first use, charge the Clarisonic Pedi device for 24 hours.

- Review product directions on each of the Pedi formulations.
- Push the on/off button to turn on your Pedi device.
- Use factory speed setting for optimal results.
- Pedi will automatically shut off after the cycle is complete.

NOTE: Keep brush head/disc flush to the skin. Pressing too hard will impede the motion and reduce effectiveness.

bound edge

bound edge

PEDI REGIMEN

DAILY

Pedi-Buff treatment with Wet/Dry Buffing Brush Head: Dispense a **quarter**-sized amount of Pedi-Buff to the soles of the feet, then use a moistened Pedi Wet/Dry Buffing Brush Head to massage into skin for 2 minutes on each foot, concentrating on heels or other rough, dry areas.

Pedi-Balm: Daily, apply a liberal amount to dry feet following Pedi-Buff or Pedi-Boost treatment.

TWICE WEEKLY

Smoothing Disc: On dry feet, use the Pedi Smoothing Disc on rough dry patches for **1 minute per area**. Follow with the Wet/Dry Buffing Brush Head.

Pedi-Boost: Immediately following use of Wet/Dry Buffing Brush Head, dispense a **nickel**-sized amount of the Pedi-Boost to each foot, gently smoothing over soles of the feet. Wait 3 to 5 minutes, then apply the Pedi-Balm.

NOTE: For optimal results, replace your Wet/Dry Buffing Brush Head every 3 months and Smoothing Disc every 6 months.

bottom page (when book flips open)


top page (when book flips open)

FEATURES OF YOUR CLARISONIC® PEDI DEVICE

SPEED SETTINGS

While the factory speed setting is recommended for optimal results (Speed 3), the Pedi device offers three speeds for user preference when using the Wet/Dry Buffing Brush Head. To change speeds, press the speed ▲ or ▼ buttons while the Pedi device is on. Speed is indicated visually on the illuminated bezel surrounding the button pad.

Speed	Visible indication
Wet/Dry Buffing Brush speed settings	
Speed 3	upper LED light on
Speed 2	middle LED light on
Speed 1 (+Pulse)	lower LED light on
Smoothing Disc speed setting	
Disc Speed	all LED lights on

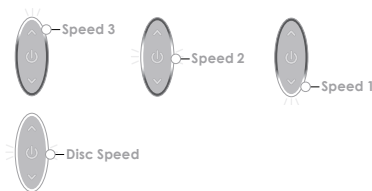

bound edge

bound edge

CYCLE TIMER

For even and thorough care of your feet, the Pedi device has a timer that pulses momentarily at one-minute intervals to indicate it is time to move to another part of your foot. Pedi will automatically shut off when cycle is complete.

Attachment	Factory Setting	Optional Setting	To Decrease Cycle Time	To Increase Cycle Time
Pedi Wet/Dry Buffing Brush Head	2 minute cycle	1 minute cycle	While the handle is off, press and hold the ▼ button for 3 seconds. Handle will pulse once to indicate it is in the 1 minute cycle.	While the handle is off, press and hold the ▲ button for 3 seconds. Handle will pulse twice to indicate it is in the 2 minute cycle.
Pedi Smoothing Disc	3 minute cycle	2 minute cycle	While the handle is off, press and hold the ▼ button for 3 seconds. Handle will pulse twice to indicate it is in the 2 minute cycle.	While the handle is off, press and hold the ▲ button for 3 seconds. Handle will pulse three times to indicate it is in the 3 minute cycle.

To pause the cycle for up to 30 seconds, press the on/off button. The bezel will fade in and out in pause mode. To resume, press the on/off button.

top page (when book flips open)

CHARGING

The pLink charger allows the Pedi device to be rechargeable. A fully charged device averages 18 minutes of use depending on the speed at which it is run. The convenient pLink charger magnetically attaches to the Pedi handle as shown.



CHARGING INDICATORS

Action	Indicator
Attach pLink charger	Handle emits two pulses
Charge the handle	The battery life indicator will change from red to yellow to white as it fills the charge.
When fully charged	The battery life indicator will glow solid white. Allow approximately 24 hours for a full charge.

The pLink charger is compatible with 100-240 Volts AC; 50/60Hz, allowing it to be used worldwide with the appropriate country adapter. If the shape of the plug does not fit the power outlet, use an attachment plug adapter of the proper configuration for the power outlet.

bound edge






bound edge

NOTE: The Pedi handle is not compatible with the charging cradle for the full-size Clarisonic PLUS, PRO and Classic models or the Mia pLink charger.

A traditional wall mount AC adaptor and a USB plug are included for charging options.

BATTERY LIFE

The Pedi device features a real-time battery life indicator located just below the speed ▼ button. During the run cycle and for 10 seconds after the cycle is complete, the light will be lit white, yellow or red depending on the amount of battery life available.

	Indicator Color	Battery Life Level
	White	Full
	Yellow	Medium
	Red	Low
	Flashing Red + BEZEL	Almost Empty
	Flashing Red + BEZEL + 3 Pulses	Empty



top page (when book flips open)

CARING FOR YOUR PEDI DEVICE

To keep your Pedi device in optimum condition, do not use abrasive cleansers or chemicals to clean any part of the handle. Do not put any part of the Pedi System in the dishwasher. There are no negative effects created by using common disinfectants such as isopropanol or barbicide. For optimal results, replace your Wet/Dry Buffing Brush Head every 3 months and Smoothing Disc every 6 months.

HANDLE

We suggest gently cleansing the handle with warm soapy water to remove any residue. To sanitize the handle, wipe it with a soft cloth containing a disinfecting solution. The handle is sealed and fully waterproof. Never attempt to open the brush handle for any reason.

INFREQUENT USE: The Clarisonic handle should receive a charge occasionally. If you rarely use the handle, charge it with the pLink every 3 months to maintain its charging capability.

pLink CHARGER

IMPORTANT: Unplug the pLink charger, then wipe it with a soft, damp cloth. Do not immerse the charger in water.

bound edge

bound edge

BRUSH HEAD AND SMOOTHING DISC

Once a week, remove the brush head or disc from the handle and rinse with warm soapy water to remove any residue.

To remove the Wet/Dry Buffing Brush Head or Smoothing Disc, **1.** Grip the base of the brush head/disc firmly, then push and twist it counterclockwise (like a medicine cap). **2.** Pull the head away from the handle.

To attach the brush head/disc, push down and twist the head clockwise until it snaps into place. Be sure you hear a tight snap.

TIP: Use the protective cap to easily remove and attach the Wet/Dry Buffing Brush Head or Smoothing Disc with a simple twist.

When not in use, protect and store your Pedi Wet/Dry Buffing Brush Head or Smoothing Disc in its cap.



top page (when book flips open)

CLARISONIC® CUSTOMER SERVICE AND LIMITED WARRANTY INFORMATION

Congratulations on your purchase! We value our customers and aim to provide the highest quality products to ensure customer satisfaction. Please use this as your reference for any customer service or warranty needs you may have in the future. We also encourage you to register your product at www.clarisonic.com/registration.

We are happy to offer a 90 day money back guarantee. If you are for any reason dissatisfied with the purchase of your PEDI from an authorized dealer, call Customer Service at 888-525-2747 to make arrangements for the return.

Clarisonic's warranty obligations are limited to the terms set out below.

Limited Warranty does not cover formulations.

1. Warranty Coverage

- a) For the duration of the Warranty Period, Clarisonic warrants the Product against defects in materials and workmanship arising from Normal Use of the Product.
- b) If there is a defect in the Product which is covered by this Limited Warranty, Clarisonic agrees to exchange the Product with a new equivalent Product. This is the sole remedy available for breach of warranty.
- c) This Limited Warranty is exclusive of all other warranties, whether oral or written, express or implied. There are no implied warranties created by the manufacture, sale, or use of the Product. If Clarisonic cannot lawfully disclaim implied warranties under this Limited Warranty, all such warranties, including warranty of merchantability and fitness for a particular purpose, are limited in duration of this Limited Warranty. Some States do not allow limitations on how long an implied warranty lasts, so this limitation may not apply to you.

2. How to get warranty service or for general customer service inquiries:

In order to receive service under this Limited Warranty, please call Customer Service at 1-888-525-2747 who will direct you how to proceed.

3. Limitations

- a) This warranty is limited and may be relied upon only:

bound edge

bound edge

- (i) by the original end user of Clarisonic's Product; and
- (ii) where the Product was manufactured by or for Clarisonic and sold by an authorized distributor.
- b) To obtain service under this Limited Warranty, you will be required to provide Clarisonic with original proof of purchase date or you must have registered your Product. Registering your Product permits Clarisonic to contact you in the event of a product question or recall, allows you to sign up to receive future correspondence from us and gives you easy access to the latest Clarisonic news and information.
- c) This Limited Warranty does not apply where the Product is subjected to use that does not constitute Normal Use, including but not limited to personal injury or property damage arising from misuse of the Product.

4. Exclusions

Clarisonic is not responsible for any indirect, incidental, special or consequential damages arising out of the use of the Product, whether arising from an electrical issue or otherwise. Some States do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

5. Validity

This Limited Warranty is valid only in the USA.

6. Definitions

- a) "Normal Use" means ordinary consumer use under normal home conditions according to the instruction manual included with the Product. It does not include using the Product with a voltage converter.
- b) "Product" means **Pedi device**.
- c) "Warranty Period" means **2 years from** the date of purchase of the Product.*

*Pedi models purchased from skin care professionals have a 3 year warranty.

REGISTER TODAY

Register to become a Clarisonic Preferred Customer

To register your Clarisonic Padi go to **www.clarisonic.com/registration**. Sign up for Clarisonic Email and gain access to sneak previews of new product introductions and great insider skin care tips.

clarisonic.com | 888-525-2747

Clarisonic respects your privacy; we do not share your personal information with any third parties.

Visit **clarisonic.com** for more comprehensive information including product user guide updates, customer reviews, frequently asked questions, and more.

clarisonic

Pacific Bioscience Laboratories, Inc.
Redmond, WA 98052 USA

© 2013 Pacific Bioscience Laboratories, Inc.
All rights reserved. Clarisonic and pLink are registered
trademarks of Pacific Bioscience Laboratories, Inc.

PBL07319

