cları§onıc

ARIA

ADVANCED SONIC CLEANSING

User Guide



FIG. 1. CLARISONIC ARIA™

- (A) HANDLE
- B BRUSH HEAD
- © SPEED UP BUTTON 📵
- D ON/OFF BUTTON
- **E** SPEED DOWN BUTTON **3**
- F SPEED/CHARGE INDICATOR
- **©** BATTERY LIFE INDICATOR **◎**
- H plink™ CHARGER 3
- ① USB
- J DRYING STAND
- **(K)** PLUG ADAPTOR



FIG. 2. CHARGING OPTIONS





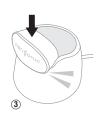


FIG. 3. CHARGING OPTIONS











ENGLISH



IMPORTANT SAFEGUARDS

When using electrical products, especially when children are present, basic safety precautions should always be followed, including but not limited to the following:

READ ALL INSTRUCTIONS BEFORE USE

DANGER - To reduce the risk of electrocution:

- 1. Do not place or store the charger where it can fall or be pulled into a bathtub or sink.
- Do not place the charger in or drop the charger or plug into water or other liquid. Charger unit is not for immersion or for use in the shower.
- 3. Do not reach for a charger or plug that has fallen into water. Unplug immediately.

WARNING – To reduce the risk of burns, electrocution, fire, or injury to persons:

- Close supervision is necessary when this product is used by, on, or near children or physically challenged persons.
- Use this product only for its intended use as described in this manual.Do not use attachments not recommended by the manufacturer.



- 3. Keep the cord away from heated surfaces.
- **4.** Never use while sleeping or drowsy.
- 5. Do not use outdoors or where oxygen is being administered.

Never operate the Clarisonic brush handle if it is damaged. **Do not** operate the charger if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water.

SAVE THESE INSTRUCTIONS

- The handle and charger have no serviceable parts.
- The supply cord cannot be replaced. If the cord is damaged, the charger must be unplugged and replaced.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 and part 18 of the FCC Rules.

For further details please see our website.

IMPORTANT CAUTIONS AND WARNINGS

- If you are under a doctor's care for any skin condition or if you think you may have a skin condition, please consult your physician before using the Clarisonic. Refer to our website for more information.
- We recommend that you do not share brush heads.
- **Do not** use the Clarisonic with jagged exfoliating particles such as shells.
- Using the Clarisonic to remove makeup may stain the bristles, but will not affect performance. If discoloration occurs, clean the brush head with soap and water.
- This product uses magnets.



INSTRUCTIONS FOR THE USE OF CLARISONIC ARIA

Prior to the first use, charge the Clarisonic handle for 24 hours.

- Remove eye makeup by hand.
- Apply cleanser directly to wet skin or to a moistened brush head.
- Push the on/off button to turn on your sonic cleansing system.
- Select desired speed. 📵
- Follow T-TIMER prompts while gently moving brush head in small circular motions. 🔘
- The Clarisonic will automatically shut off after the cleansing cycle.
- Rinse skin thoroughly to remove excess cleanser.

The Clarisonic handle is waterproof for use in the shower or bathtub. Refer to Important Safeguards regarding the charger.

NOTE: Keep brush head flush to the skin. Pressing too hard will impede the motion and reduce effectiveness.

REPLACING THE CLARISONIC BRUSH HEAD

- To remove the brush head: 1) Grip the brush head firmly, then push and twist it counter-clockwise; 2) Pull the head away from the handle.
- To attach the brush head: Push down and twist the head clockwise until it snaps into place. Be sure you hear a tight snap.

Tip: Use the brush head cap to easily remove and attach the brush head with a simple twist.

We make a variety of interchangeable brush heads, uniquely designed and engineered for specific skin types or conditions. For more information visit our website.

FFATURES OF YOUR ARIA



3 SPEED SETTINGS FOR FACIAL CLEANSING

Speed is indicated visually on the illuminated bezel surrounding the button pad. To change speeds, press the 'speed up' or 'speed down' button while the Aria is on. The factory setting is speed 1.







CLEANSING TIMER (T-TIMER)

For even and thorough cleansing of your face, the Aria features a proprietary T-TIMER that beeps and pauses momentarily during your cleansing cycle, to indicate it is time to move to another part of your face. We recommend the one-minute factory default setting: ① 20 seconds on your forehead;

2) 20 seconds on your nose/chin; 3) and 4) 10 seconds on each cheek.



T-TIMER settings for facial cleansing are indicated audibly. To change the setting, press and hold the 'speed up' button (2 minute cycle) or 'speed down' button (1 minute cycle) when the Aria is completely turned off (not in pause mode).

T-TIMER settings for facial cleansing

Audible indication	Cleansing duration	T-TIMER beeps
2 beeps	2 minutes	at 40, 80, 100 seconds
1 beep	1 minute (factory default setting)	at 20, 40, 50 seconds





During the battery life cycle, the color of the battery life indicator shows the amount of charge available.

Indicator color	Battery life level
White	Full
Yellow	Medium
Red	Low
Flashing Red + flashing bezel	Almost Empty
Flashing Red + flashing bezel + 3 beeps	Empty

DUAL-FUNCTIONING DRYING STAND & CHARGING STATION





The drying stand can be used to store the handle after use, on your bathroom counter or in the shower.

To use the drying stand: 1) Place the stand so the 'U' shaped curve is facing towards you.
2) Insert the Aria handle with the brush head facing towards you. The battery life indicator will be visible.

This uniquely designed drying stand also serves as a charging station when the pLink charger is attached (refer to CHARGING section). **NOTE:** The charger is not for immersion or for use in the shower (see IMPORTANT SAFEGUARDS regarding the charger).

CHARGING

Your Aria is rechargeable with the included pLink charger, which magnetically attaches to the handle. A fully charged Aria gives approximately 28 minutes of use.

CHARGING OPTIONS

Option 1 (FIG. 2) Without Charging Station:

- Attach magnetic pLink charger to handle;
- ② Plug USB into plug adaptor.



Option 2 (FIG. 3) With Charging Station:

① Insert USB end of pLink into center hole of drying stand; ② Insert pLink head into small hole at the front of the drying stand; ③ Press pLink into hole until you hear a click; ④ Plug USB into plug adaptor; Place Aria in stand, the bezel light should fade in and out to indicate charging.



Indicators during charging

Action	Indicator
Attach pLink charger	Handle beeps twice.
Charge the handle	The illuminated bezel around the button and the battery life indicator will fade in and out while charging. The battery life indicator will change from red to yellow to white as it fills the charge.
When fully charged	The illuminated bezel will glow solid. Allow approximately 18 hours for a full charge.

The pLink charger is compatible with 100-240 Volts AC; 50/60 Hz, allowing it to be used wordwide with the appropriate country adapter. If the shape of the plug does not fit the power outlet, use an attachment plug adapter of the proper configuration for the power outlet.

NOTE: The Aria handle is not compatible with the charging cradle for the full-size Clarisonic models.



CARING FOR YOUR CLARISONIC

To keep your Clarisonic in optimum condition, care for it as follows:

Do not use abrasive cleaners or chemicals to clean any part of the Clarisonic.

Do not put any part of the Clarisonic in a dishwasher.

HANDLE

Once a week remove the brush head and wash the handle using warm soapy water to remove any residue buildup. The handle is sealed and fully waterproof.

INFREQUENT USE: The Clarisonic handle should receive a charge occasionally. If you rarely use the handle, charge it every 3 months to maintain its charging capability.

BRUSH HEADS



Brush heads need to be replaced every 3 months as the bristles become fatigued and less effective over time. Once a week, remove the brush head from the handle and rinse with warm soapy water to remove any residue.

CLARISONIC CUSTOMER SERVICE INFORMATION

For general inquiries please visit our website clarisonic.com/customerservice or contact your in-country customer service team.

O CLARISONIC LIMITED WARRANTY

For the conditions of your limited warranty, we refer you to the following:

1. Warranty Coverage

- a) For the duration of the Warranty Period, Clarisonic warrants the Product against defects in materials and workmanship arising from Normal Use of the Product.
- b) If there is a defect in the Product which is covered by this Limited Warranty, Clarisonic agrees to exchange the Product with a new equivalent Product. Clarisonic's sole obligation under this Warranty is limited to such replacement. This Limited Warranty is an added benefit which does not affect consumer's statutory rights.

2. How to get Warranty service

Contact your in-country customer service team. Visit our website clarisonic.com/customerservice for more information.

3. Limitations

- a) This Warranty is limited and may be relied upon only:
 - (i) by the original end user of Clarisonic's Product;
 - (ii) within the Warranty period; and
 - (Iii) where the Product was manufactured by or for Clarisonic and sold by an authorized distributor.
- b) To obtain service under this Limited Warranty, you will be required to provide Clarisonic with original proof of purchase.
- c) This Limited Warranty does not apply where the Product is subjected to use that does not constitute Normal Use (including but not limited to personal injury or property damage arising from misuse of the Product) or to unauthorized repair.

4. Exclusions

Clarisonic is not responsible for any indirect, incidental, special or consequential damages arising out of the use of the Product, whether arising from an electrical issue or otherwise, except as required by law.

5. Definitions

- a) "Normal Use" means ordinary consumer use under normal home conditions according to the instruction manual included with the Product. It does not include using the Product with a voltage converter.
- b) "Product" means Aria.
- c) "Warranty Period" means 2 years from the date of purchase of the Product, as indicated on the original proof of purchase.

15 DAY FEEL AND SEE GUARANTEE

Clarisonic is pleased to provide its customers with a 15 day "Feel and See" Money Back Guarantee Offer for all of its Products. The Feel and See Guarantee is valid for a period of 15 days from date of purchase and can only be claimed from the retailer where the product was originally purchased. Proof of purchase is required and the product must be returned in its original packaging with all the components.

Disclaimer: The 15 day Feel & See Guarantee does not apply to Clarisonic devices purchased in the travel retail channel.

clariĝonic

Pacific Bioscience Laboratories, Inc. Redmond, WA 98052 USA www.clarisonic.com/customerservice

© Pacific Bioscience Laboratories, Inc. 2013.

